

cod.443M0121

# QUADRAQUA

Istruzioni di montaggio ed uso  
Operation instructions  
Instructions de montage et usage  
Montage- und Bedienungsanleitung  
Instrucciones de montaje y uso  
instrucțiuni pentru montare și utilizare

# IRSAP

IRSAP SPA

45031 Arquà Polesine (RO) Italy  
Tel. +39 0425 466611 - Fax +39 0425 466662  
Website: www.irsap.com - E-mail: info@irsap.it

IR GROUP SARL


19,Chemin de la Plaine 69390 Vourles (France)  
Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40  
Web: www.irsap.com - E-mail: irsaprhoss@irgroup.fr

IRSAP IBERICA S.L.

Oficina y Almacén: P.I.CAMI RAL  
Leonardo da Vinci,4 08850 Gavà (Barcelona)  
Tel. 93 633 47 00 - Fax 93 633 47 04  
E-mail: informacion@irsap.com  
Web: www.irsap.com

IRROM Industrie S.R.L.

Str. Principală 1/A, Sat Fundătara, Iclod 407336,  
jud. Cluj, România  
Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404  
Web: www.irsap.ro

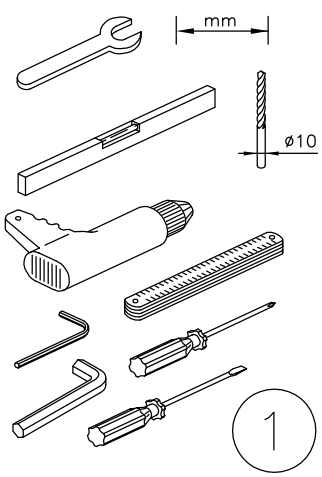

Raccordi multistrato (MD) e per tubo rame (RD) per valvola e detettore vari diametri.  
Coupling multilayer (MD) rings for copper (RD) pipes in different diameters.  
Raccords tuyau multicouche (MD) en cuivre (RD) pour robinet et coude de plusieurs diamètres.  
Kupferrohrverschraubungen multilayer (MD) für Ventil und Ausgangsventil (RD), diverse Durchmesser.  
Conexiones multicapa (MD) tubo de cobre (RD) para válvula y detector de distintos diámetros.  
Cuplaj multistrat (MD) tub aramă (RD) pentru robinet tur și robinet retur diverse diametre.

