

cod.866M0317

GET UP GET UP AIR MIX

ISTRUZIONI DI MONTAGGIO ED USO
OPERATION INSTRUCTIONS
INSTRUCTIONS DE MONTAGE ET USAGE
MONTAGE-UND BENUTZUNGSANLEITUNG
INSTRUCCIONES DE MONTAJE Y USO
INSTRUCȚIUNI PENTRU MONTARE ȘI UTILIZARE

IRSAP

creating your comfort

45031 Arquà Polesine (RO) Italy
Tel. +39 0425 466611 - Fax +39 0425 466662
Website: <http://www.irsap.com>
E-mail: info@irsap.it

IR GROUP SARL

19, Chemin de la Plaine 69390 Vourles (France)
Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40
Web: <http://www.irsap.com>
E-mail: irsaphoss@irgroup.fr


IRSAP-RHOSS Clima Integral, S.L.

Oficina y Almacén: P.L.CAMI RAL
Leonardo da Vinci, 4 08850 Gavà (Barcelona)
Tel. 93 633 47 00 - Fax 93 633 47 04
E-mail: www.informacion@irsap.com
www.irsap.com


IRROM Industrie S.R.L.

Str. Principala 1/A, Sat Fundătara, Iclod 407336,
jud. Cluj, România
Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404
Web: www.irsap.ro


1076x550

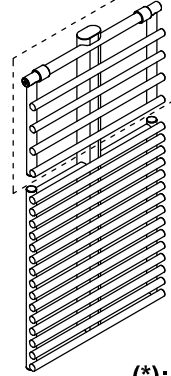

1499x550

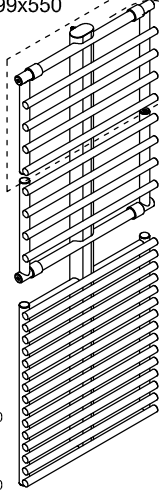


(*):

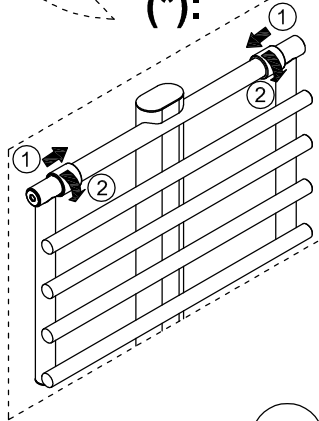

1

(*):

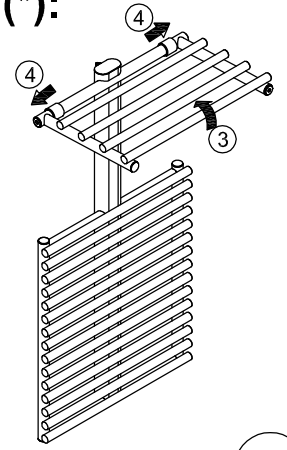


2

(*):


ESEMPIO CON RADIATORE GET UP 1076x550
EXEMPLE AVEC RADIATEUR GET UP 1076x550
EJEMPLO CON RADIADOR GET UP 1076x500
EXAMPLE WITH GET UP 1076x550 RADIATOR
BEISPIEL MIT HEIZKÖRPER GET UP 1076x550
EXEMPLU CU CALORIFERUL GET UP 1076x550

(*):

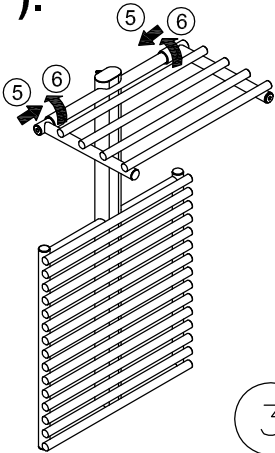


3

(*): max 7 Kg

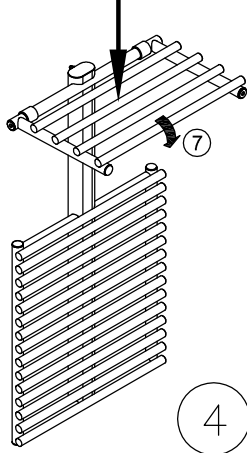


4

(*):

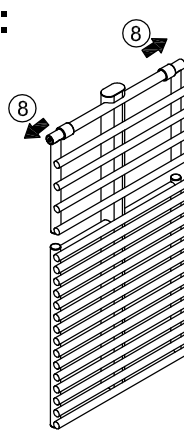


5

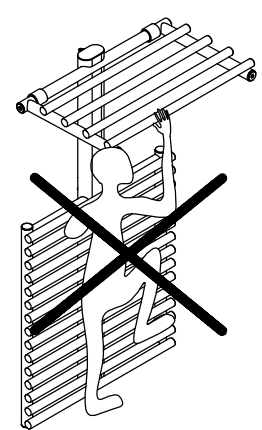


6

1499x550

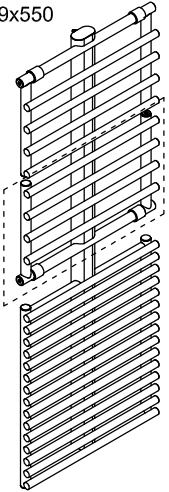


7

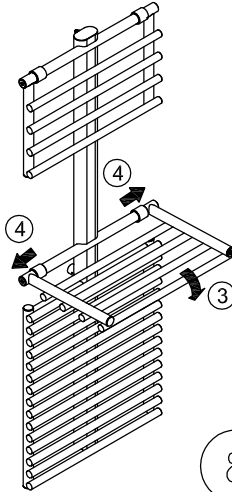


8


max 7 Kg

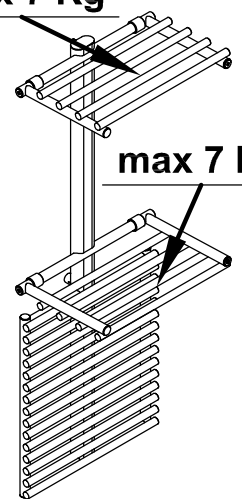


9

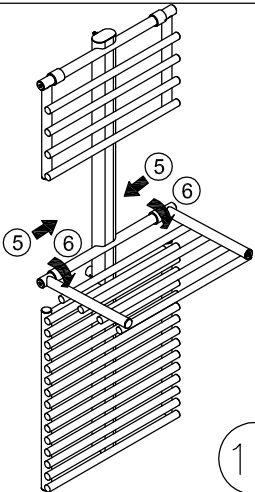


10

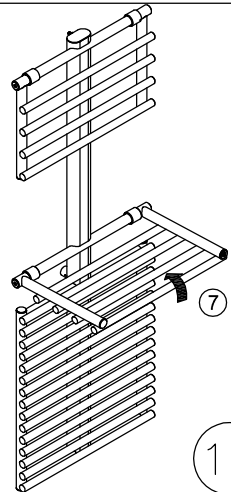

11

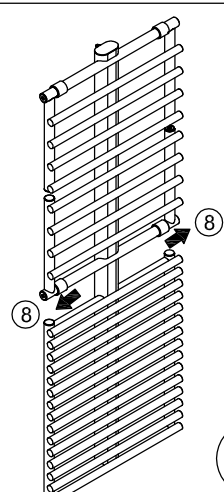


12

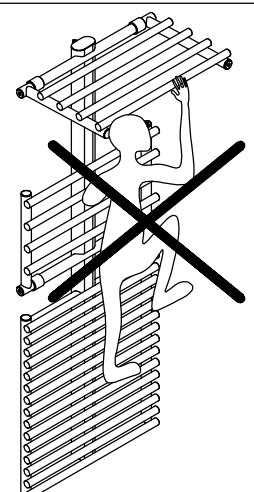

13


Istruzioni di montaggio
 Assembly instructions
 Instructions de montage
 Montageanleitung
 Instrucciones de montaje
 Instrucțiuni pentru montare

Accessori inclusi-
 Accessoires compris-
 Accessories included-
 Zubehör inklusive-
 Accesorios incluidos-
 Accesorii neincluse

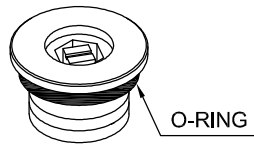


1


Accessori non inclusi-
 Accessoires non compris
 Accessories not included-
 Zubehör nicht inklusive.
 Accesorios no incluidos-
 Accesorii incluse

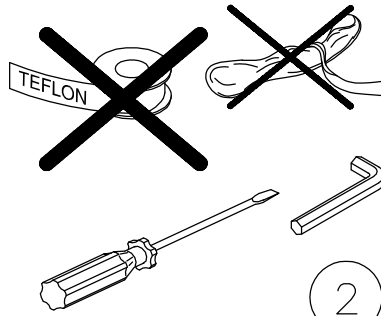


2

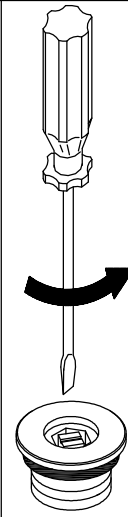


3

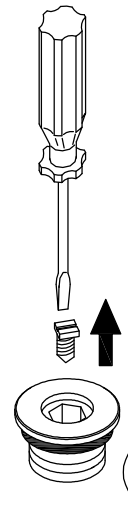

4

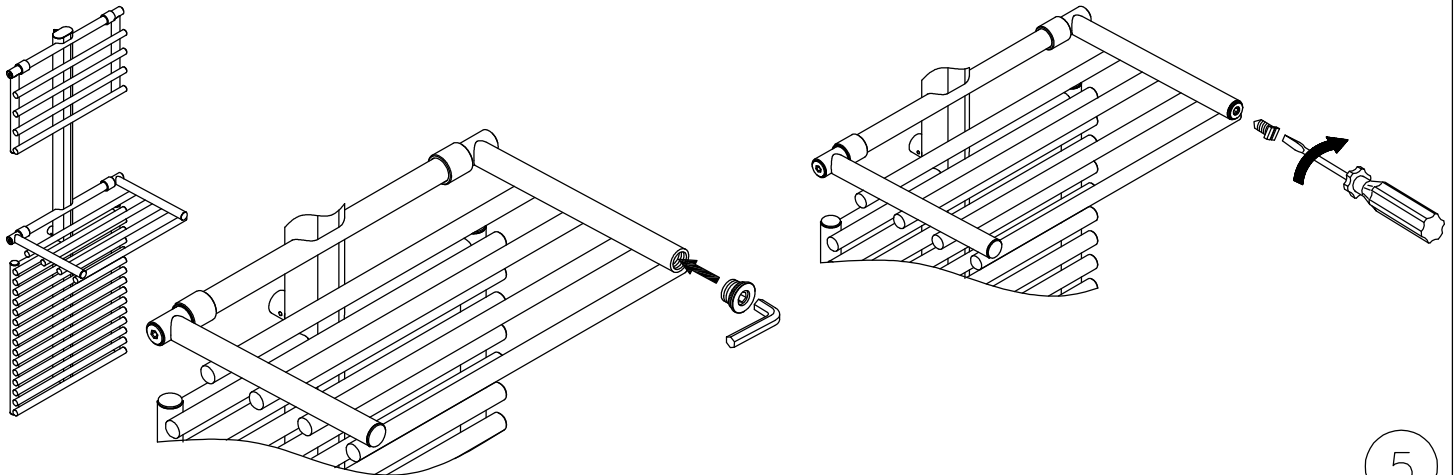

5

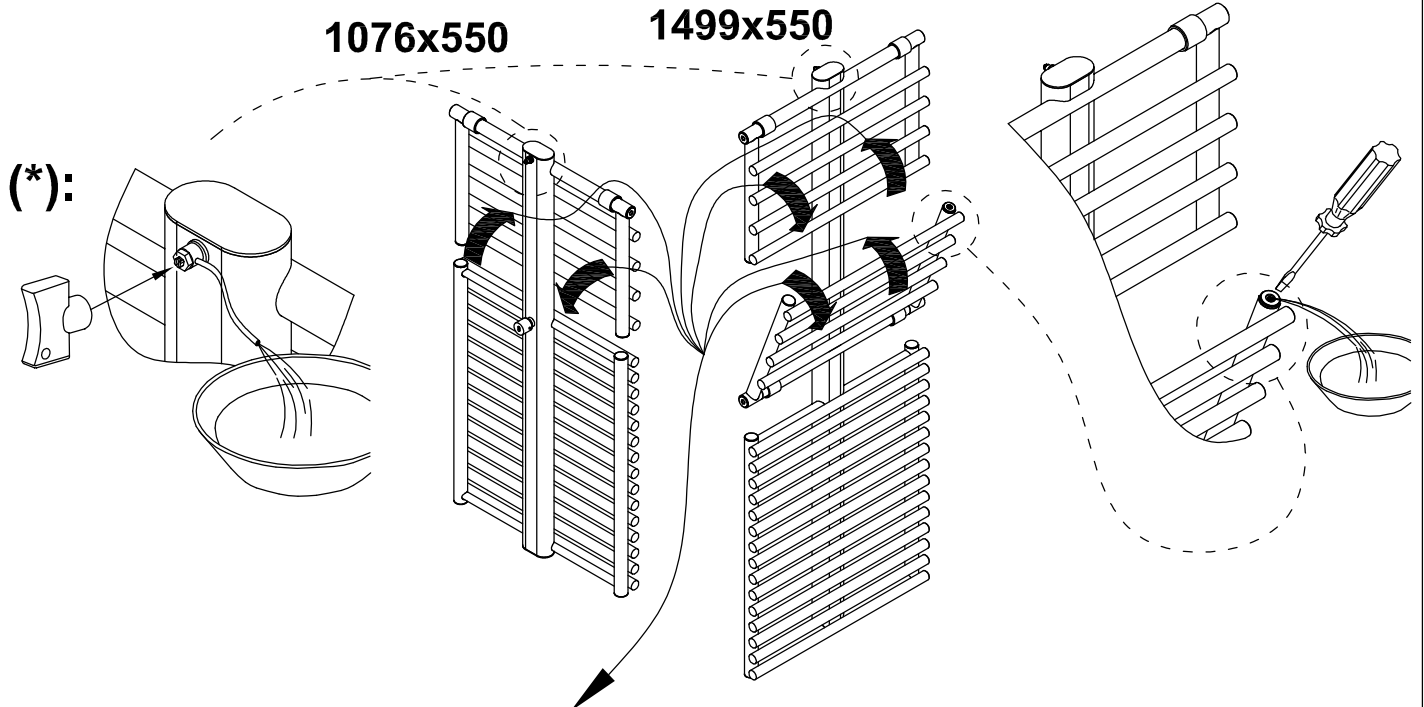

Ruotare più volte gli stendini nella fase di sfiato.
 Faire pivoter plusieurs fois les étendoirs pendant la phase d'échappement.
 Rotate the rails several times during venting.
 Durante el purgado, girar varias veces los tendedores.
 Die Heizstäbe beim Entlüften mehrmals drehen.
 Rotiți de mai multe ori portprosoapele în faza de aerisire

6