

ORIMONO

Istruzioni di montaggio ed uso
Operation instructions
Instructions de montage et usage
Montage- und Bedienungsanleitung
Instrucciones de montaje y uso
Instrucțiuni pentru montare și utilizare

IRSAP

IRSAP SPA

45031 Arquà Polesine (RO) Italy
Tel. +39 0425 466611 - Fax +39 0425 466662
Website: www.irsap.com -
E-mail: support.heat@irsap.com

IR GROUP SARL



19,Chemin de la Plaine 69390 Vourles (France)
Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40
Web: www.irsap.com -
E-mail: support.heat@irsap.com

IRSAP IBERICA S.L.

Oficina y Almacén: P.I.CAMI RAL
Leonardo da Vinci,4 08850 Gavà (Barcelona)
Tel. +34 93 633 47 00
Web: www.irsap.com
E-mail: informacion@irsap.com

IRROM Industrie S.R.L.

Str. Principală 1/A, Sat Fundătara, Iclod 407336,
jud. Cluj, România
Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404
Web: www.irsap.com

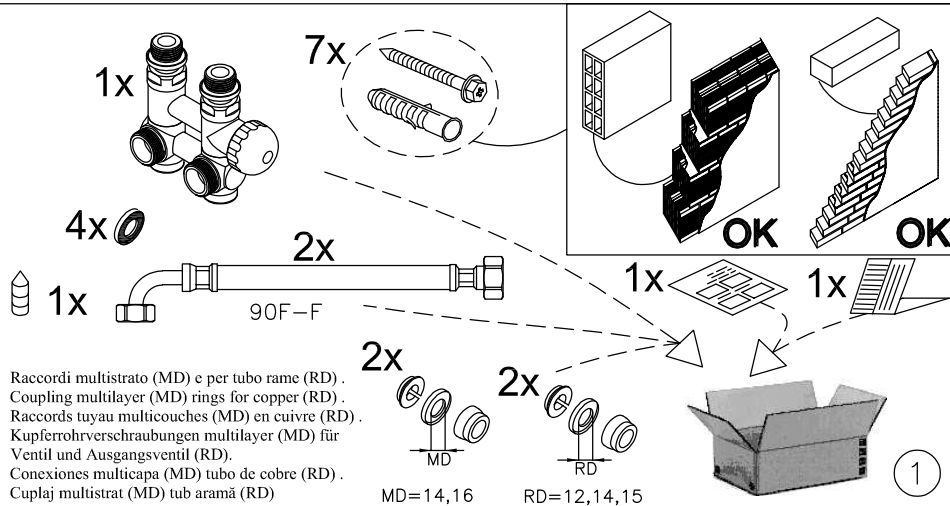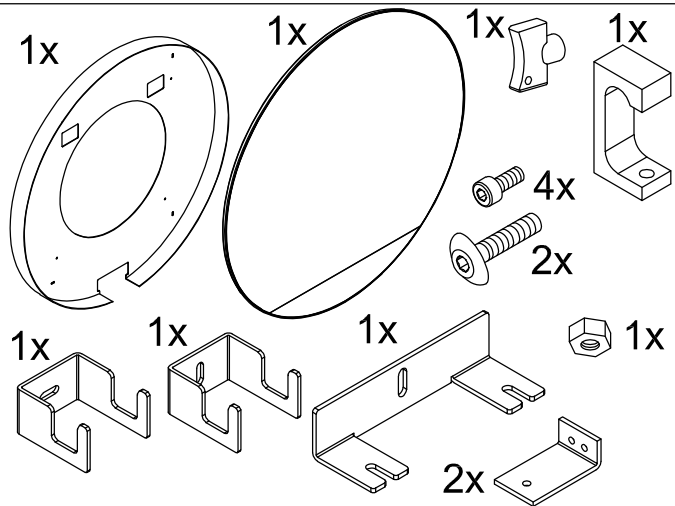

Raccordi multistrato (MD) e per tubo rame (RD).
Coupling multilayer (MD) rings for copper (RD).
Raccords tuyau multicouches (MD) en cuivre (RD).
Kupferrohrverschraubungen multilayer (MD) für Ventil und Ausgangsventil (RD).
Conexiones multicapa (MD) tubo de cobre (RD).
Cuplaj multistrat (MD) tub aramă (RD).

MD=14,16 RD=12,14,15

