


RIGO

IRA02612

Istruzioni di montaggio ed uso
Operation instructions
Instructions de montage et usage
Montage-und Bedienungsanleitung
Instrucciones de montaje y uso
instrucțiuni pentru montare și utilizare

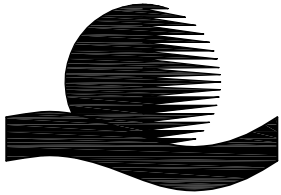

IRSAP

i termoarredatori

IRSAP SPA 45031 Arquà Polesine (RO) Italy
Tel. +39 0425 466611 ; Fax +39 0425 466662
Website: <http://www.irsap.com>; E-mail: info@irsap.it


Numero Verde
800-252246

IR GROUP S.A.S. 7,rue du Pont à Lunettes
69390 Vourles (France)
Tel. +33 04 72 31 86 31 ; Fax +33 04 72 31 86 32
Web: <http://www.irsap.com>; E-mail: irsaphoss@irgroup.fr

IRSAP-RHOSS Clima Integral, S.L. Oficinas y Almacén:
C./ Leonardo da Vinci, 4 Pol. Ind. Cami Ral
08850 GAVA' (Barcelona)
Telf. +34 93 633 47 00 ; Fax +34 93 633 47 04
Web: <http://www.irsap.com>; E-mail: info@irsap-rhoss.com

Accessoires non compris-Accessori non inclusi-Accessories not included-Zubehör nicht inklusive-Accessorios no incluidos-Accessorii neincluse

| | |
|------------------------------------|-----------------------------------|
| Cmax = Coppia massima di serraggio | Cmin = Coppia minima di serraggio |
| Cmax = Maximum torque | C min = Minimum tightening torque |
| Cmax = Couple de serrage | C min = Couple minimum de serrage |
| Cmax = Max anzugsmoment | C min = Mindest-Anziehungsmoment |
| Cmax = Esfuerzo máximo de cierre | C min = Par de torsión mínimo |
| C max = Cuplu de strângere maxim | C min = Cuplu de strângere minim |

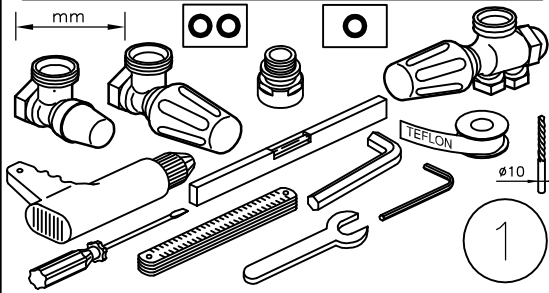

Accessoires compris-Accessori inclusi-Accessories included-Zubehör inklusive-Accessorios incluidos-Accessorii incluse

