

Istruzioni di montaggio ed uso
 Operation instructions
 Instructions de montage et usage
 Montage-und Bedienungsanleitung
 Instrucciones de montaje y uso
 Instrucțiuni pentru montare și utilizare

IRSAP

IRSAP SPA

45031 Arquà Polesine (RO) Italy
 Tel. +39 0425 466611 - Fax +39 0425 466662
 Website: www.irsap.com - E-mail: info@irsap.it

IR GROUP SARL


19,Chemin de la Plaine 69390 Vourles (France)
 Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40
 Web: www.irsap.com - E-mail: irsaprhoss@irgroup.fr

IRSAP IBERICA S.L.

Oficina y Almacén: P.I.CAMI RAL
 Leonardo da Vinci,4 08850 Gavà (Barcelona)
 Tel. 93 633 47 00 - Fax 93 633 47 04
 E-mail: informacion@irsap.com
 Web: www.irsap.com

IRROM Industrie S.R.L.


Str. Principală 1/A, Sat Fundătara, Iclod 407336,
 jud. Cluj, România
 Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404
 Web: www.irsap.ro

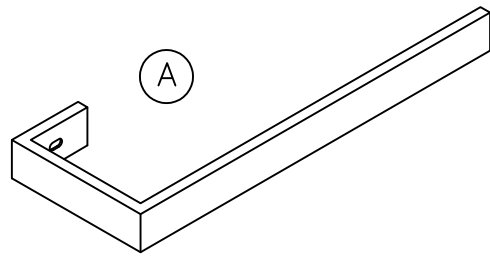


2x



 
1x




1x

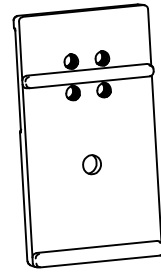



1x

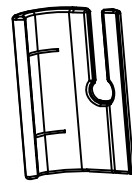

1x

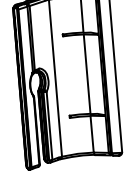


1x

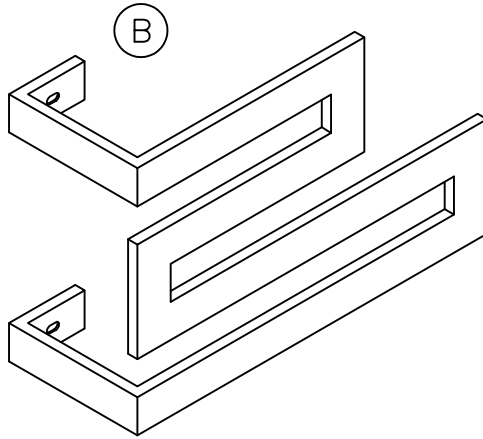 


4x



 
2x




2x

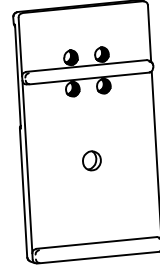




2x

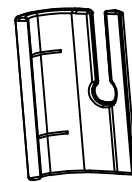


2x

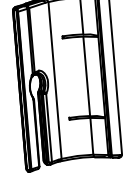


2x

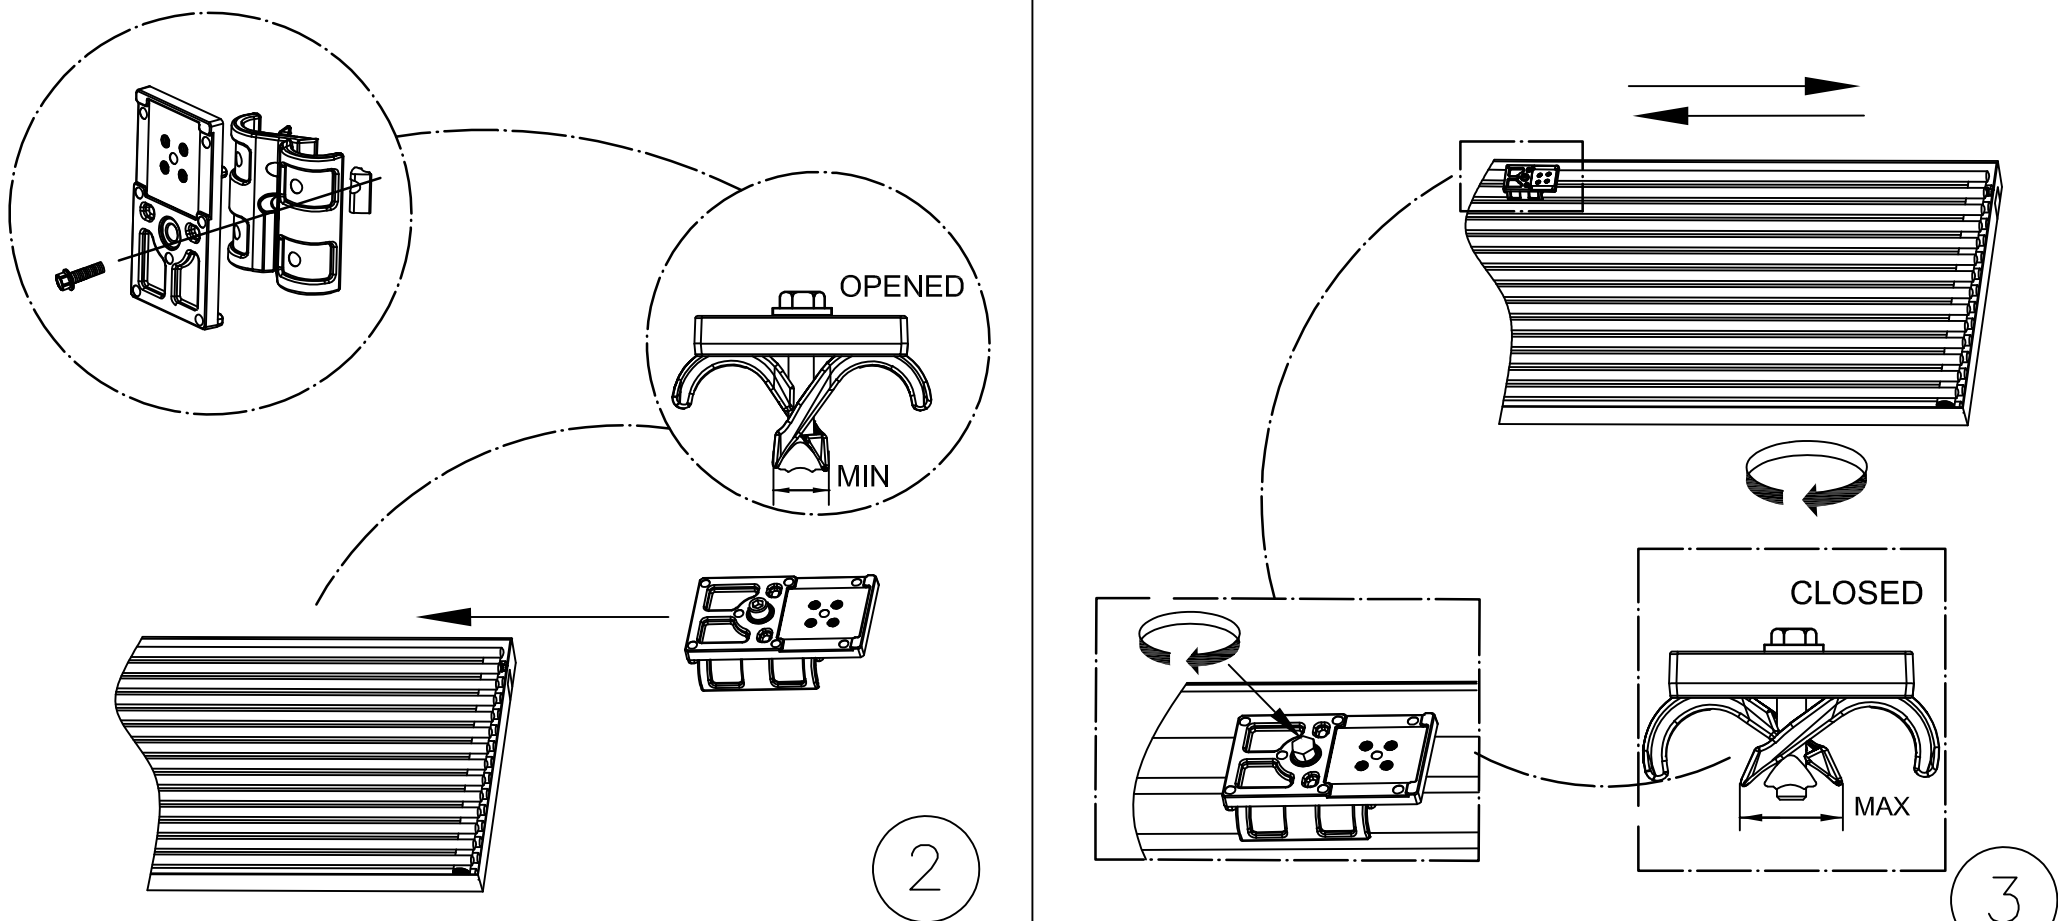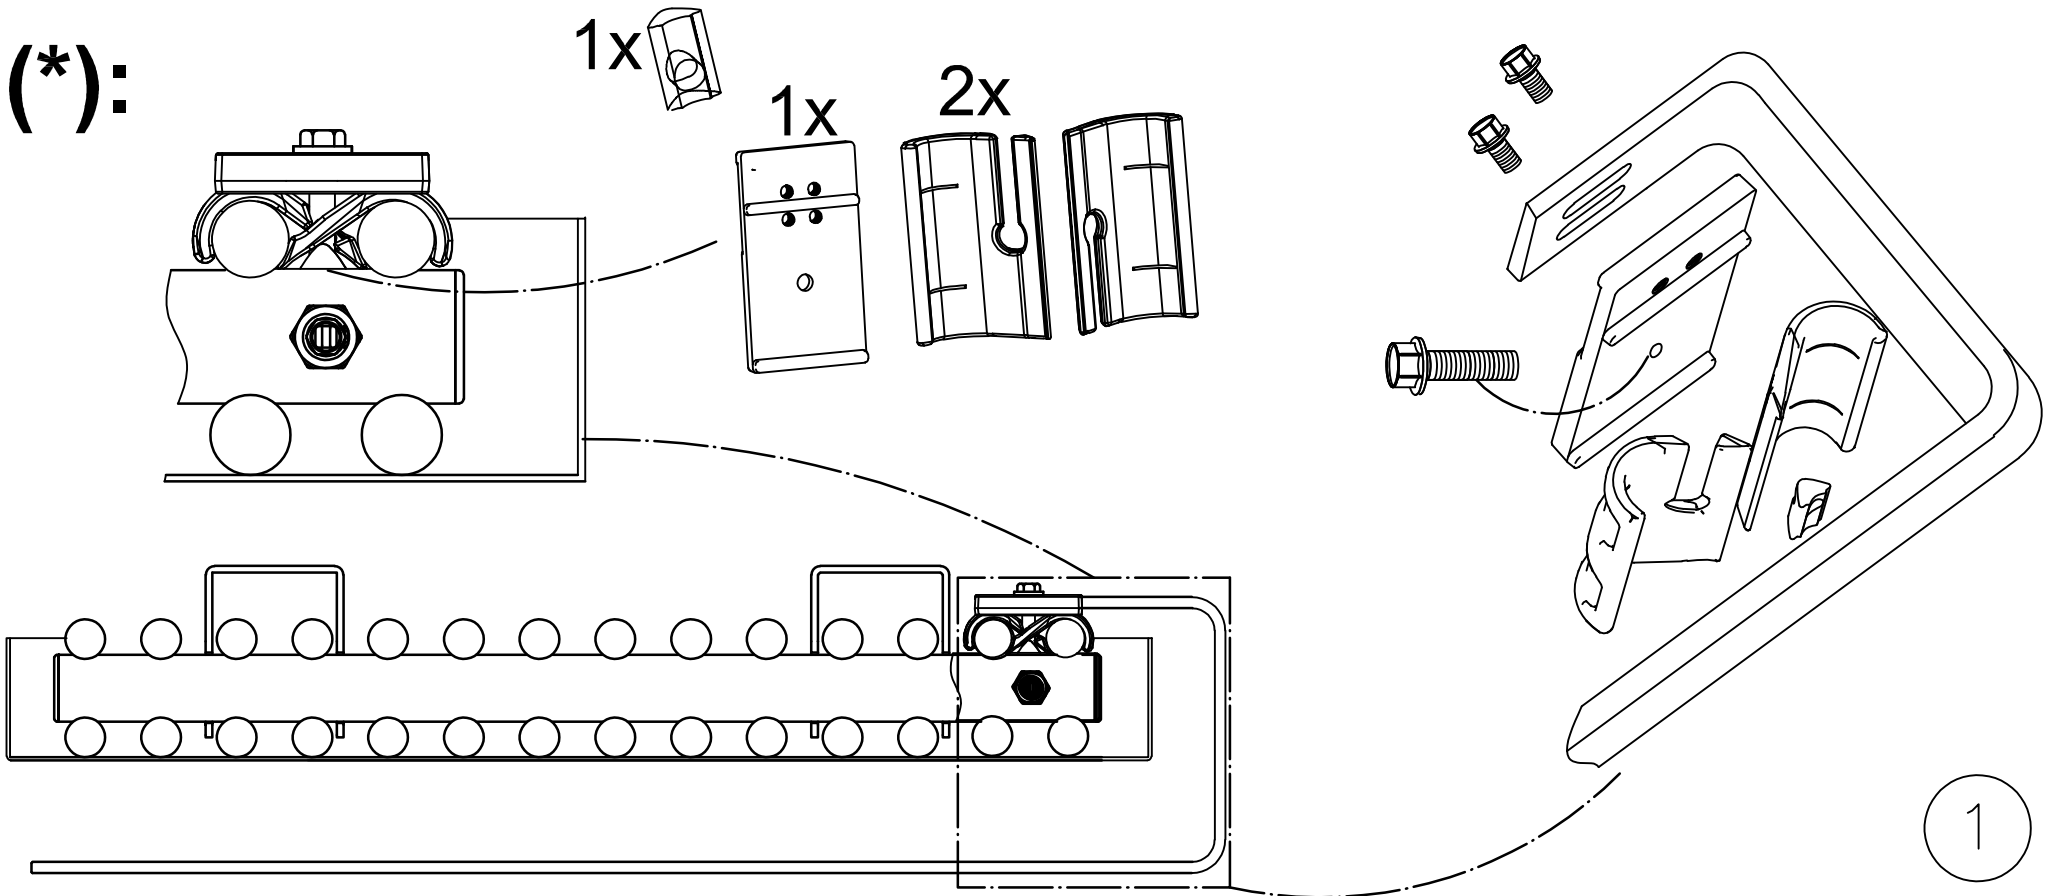 


(*):

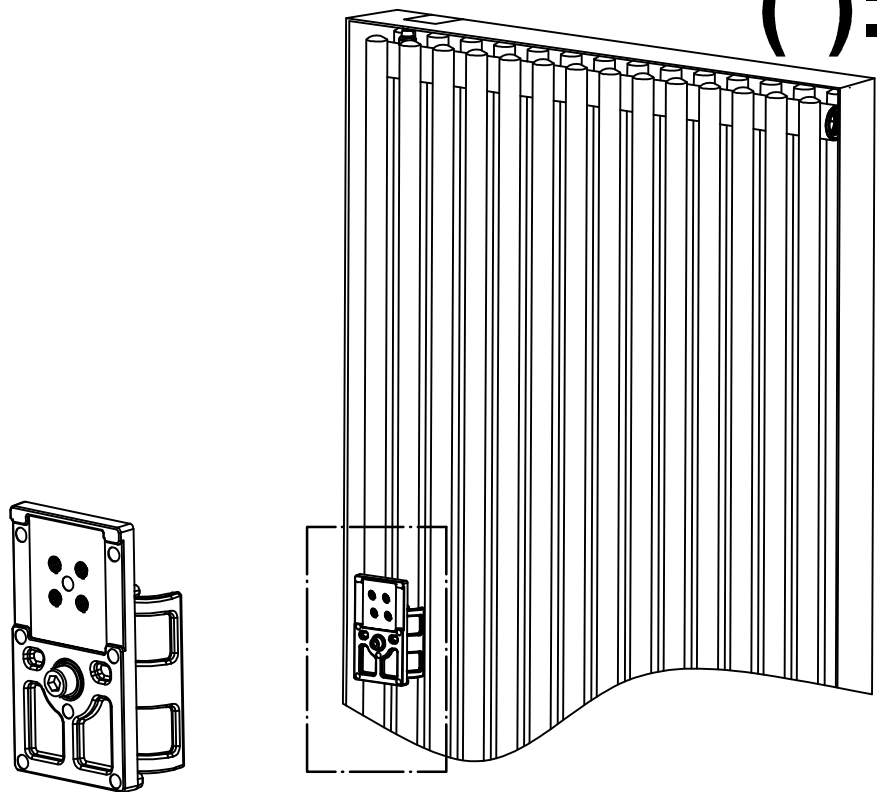


Cmax = 8 Nm

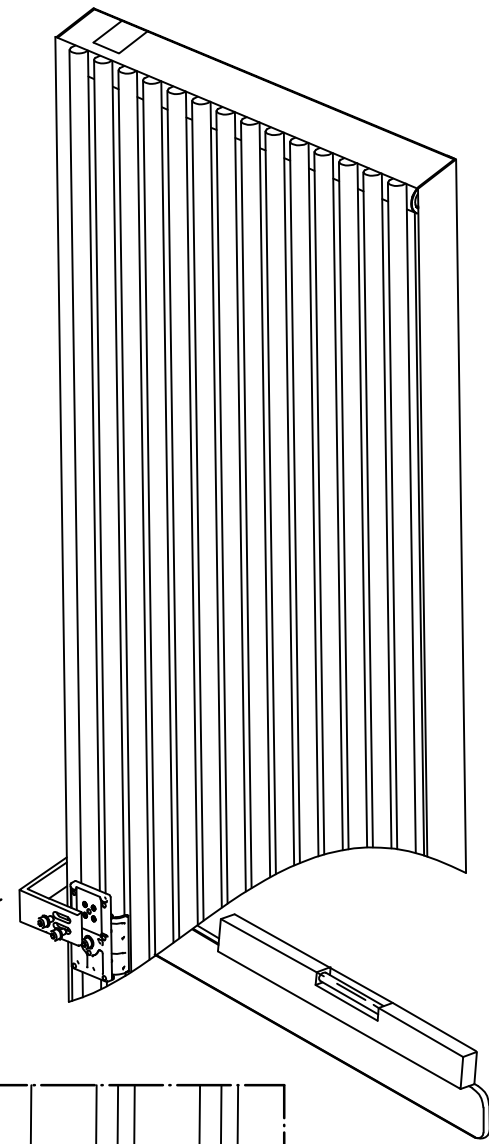


RELAX POWER

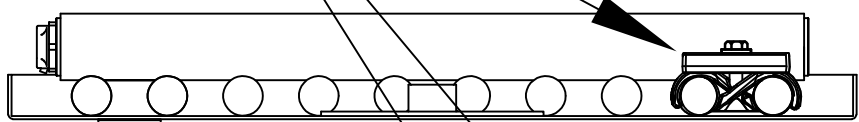

RELAX OVERPOWER

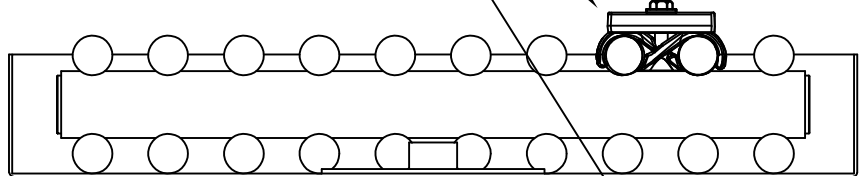

RELAX RENOVA


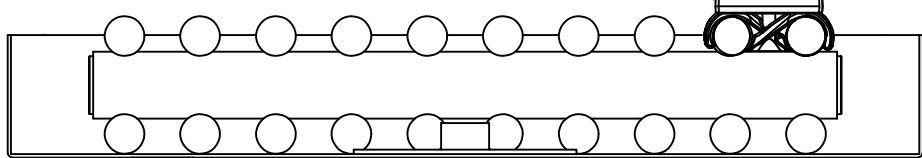


(*):

(*):


ESEMPIO CON RADIATORE
EXEMPLE AVEC RADIATEUR
EJEMPLO CON RADIADOR
EXAMPLE WITH RADIATOR
BEISPIEL MIT HEIZKÖRPER
EXEMPLU CU CALORIFERUL

4

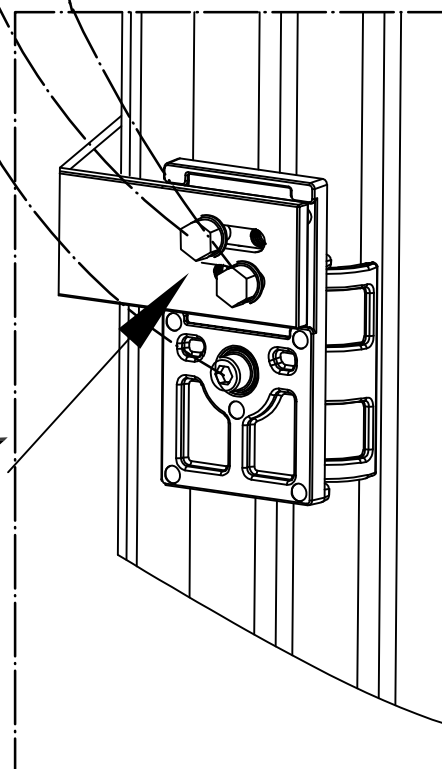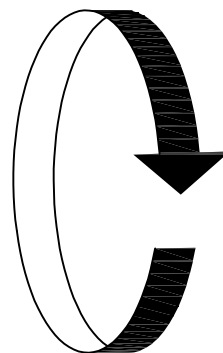


5

6



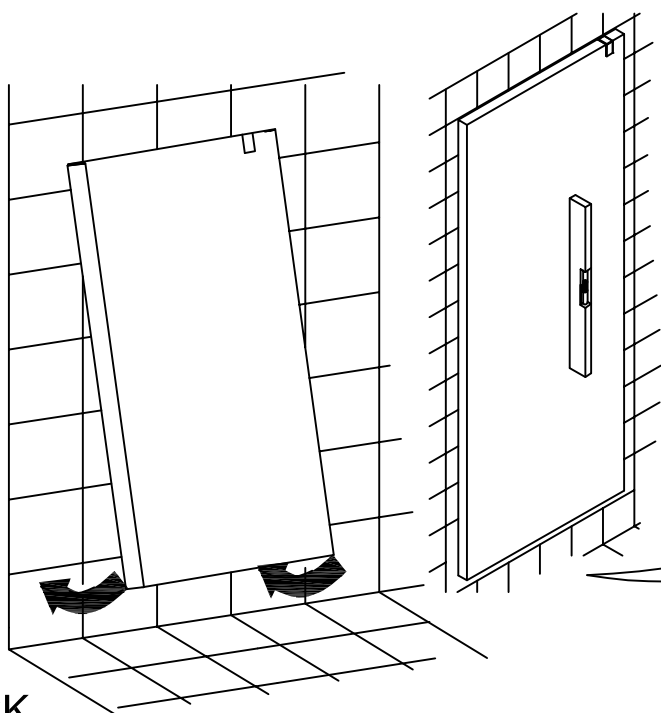


(*):

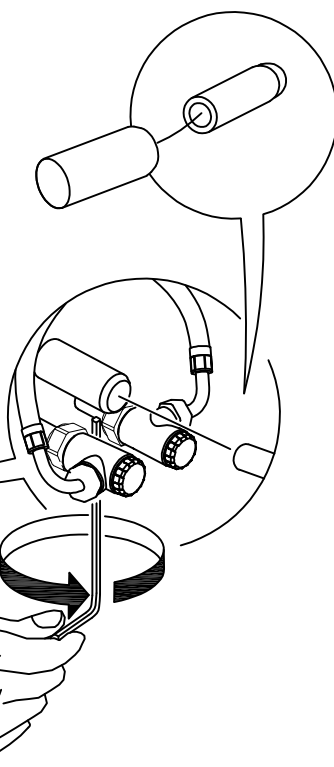

7

(*):

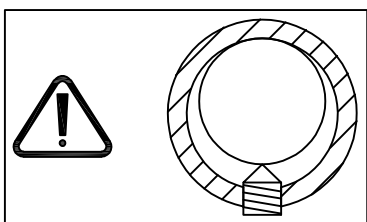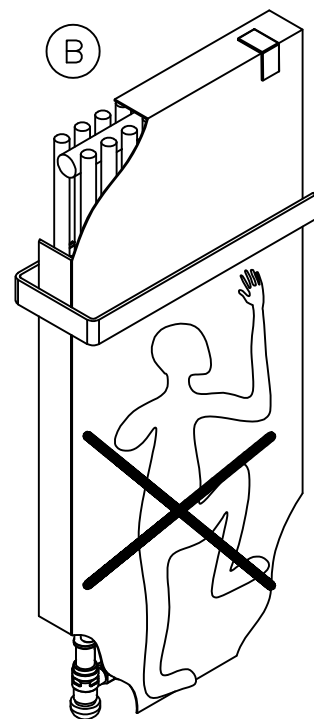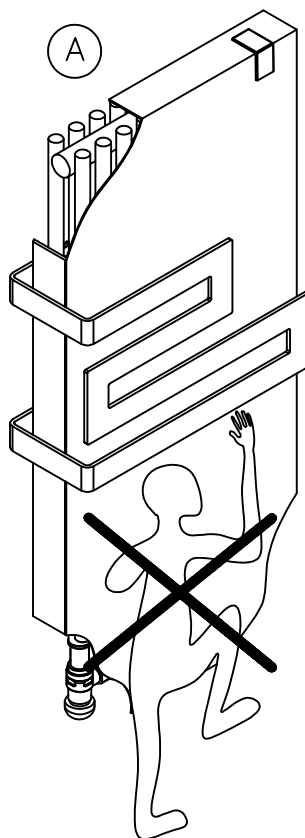

CLICK

REMOVE