

cod.674M0419

# PIANO A PIANO H

Istruzioni di montaggio ed uso  
Operation instructions  
Instructions de montage et usage  
Montage- und Bedienungsanleitung  
Instrucciones de montaje y uso  
instrucțiuni pentru montare și utilizare

# IRSAP

creating your comfort

IRSAP SPA  
45031 Arquà Polesine (RO) Italy  
Tel. +39 0425 466611 - Fax +39 0425 466662  
Website: <http://www.irsap.com>  
E-mail: [info@irsap.it](mailto:info@irsap.it)

IR GROUP SARL  
19, Chemin de la Plaine 69390 Vourles (France)  
Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40  
Web: <http://www.irsap.com>  
E-mail: [irsaphoss@irgroup.fr](mailto:irsaphoss@irgroup.fr)

IRSAP IBERICA S.L.  
Oficina y Almacén: P.I.CAMI RAL  
Leonardo da Vinci, 4 08850 Gavà (Barcelona)  
Tel. 93 633 47 00 - Fax 93 633 47 04  
E-mail: [www.informacion@irsap.com](mailto:www.informacion@irsap.com)  
[www.irsap.com](http://www.irsap.com)

IRROM Industrie S.R.L.  
Str. Pricipală 1/A, Sat Fundătara, Iclod 407336,  
jud. Cluj, România  
Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404  
Web: [www.irsap.ro](http://www.irsap.ro)

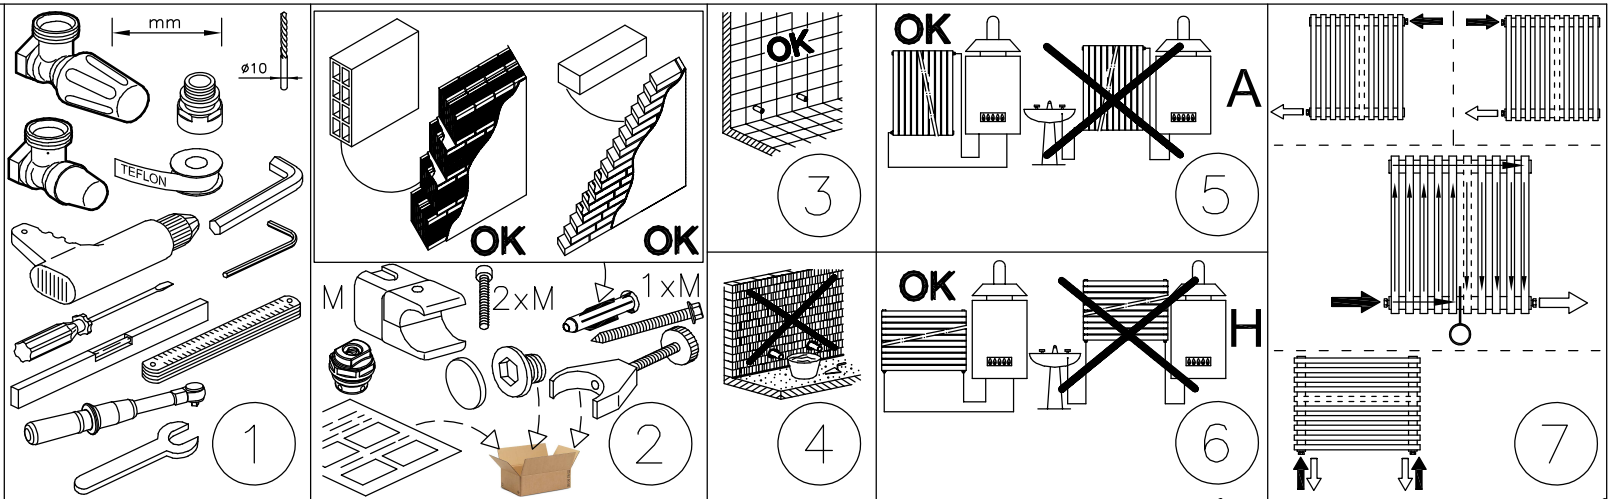


Diagram showing radiator height 'H' and number of columns 'n°'.

	n°							
H	2÷13	14	15÷16	17÷18	19÷21	22÷26	27÷29	30
420	2	2	2	2	2	2	2	2
520	2	2	2	2	2	2	2	2
700	2	2	2	2	2	2	2	2
920	2	2	2	2	2	2	2	2
1220	2	2	2	2	2	2	4	4
1520	2	2	2	2	2	4	4	4
1820	2	2	2	2	4	4	4	4
2020	2	2	2	4	4	4	4	4
2220	2	2	4	4	4	4	4	6
2520	2	4	4	4	4	4	6	6

