

# 50mm AIR MIX

Istruzioni di montaggio ed uso  
 Operation instructions  
 Instructions de montage et usage  
 Montage- und Bedienungsanleitung  
 Instrucciones de montaje y uso  
 Instrucțiuni pentru montare și utilizare

# IRSAP

IRSAP SPA

45031 Arquà Polesine (RO) Italy  
 Tel. +39 0425 466611 - Fax +39 0425 466662  
 Website: <http://www.irsap.com> - E-mail: [info@irsap.it](mailto:info@irsap.it)

IR GROUP SARL








19, Chemin de la Plaine 69390 Vourles (France)  
 Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40  
<http://www.irsap.com>; E-mail: [support.heat@irsap.com](mailto:support.heat@irsap.com)  
 SERVICE: SAV FRANCE  
 TEL. 0969 360 530

IRSAP IBERICA S.L.

Oficina y Almacén: P.I. CAMI RAL  
 Leonardo da Vinci, 4 08850 Gavà (Barcelona)  
 Tel. 93 633 47 00 - Fax 93 633 47 04  
 E-mail: [informacion@irsap.com](mailto:informacion@irsap.com)  
 Web: [www.irsap.com](http://www.irsap.com)

IRROM Industrie S.R.L.


Str. Principală 1/A, Sat Fundătara, Iclod 407336,  
 jud. Cluj, România  
 Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404  
 Web: [www.irsap.ro](http://www.irsap.ro)

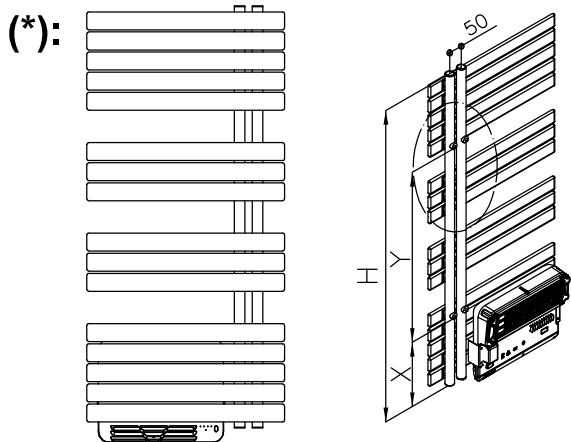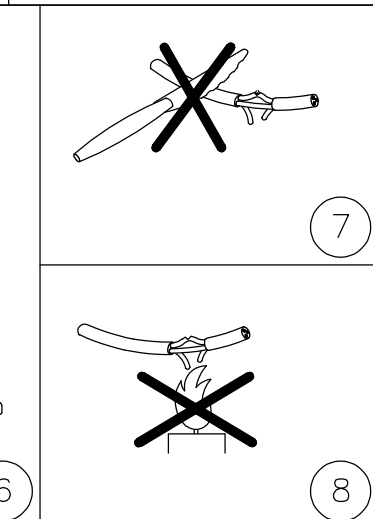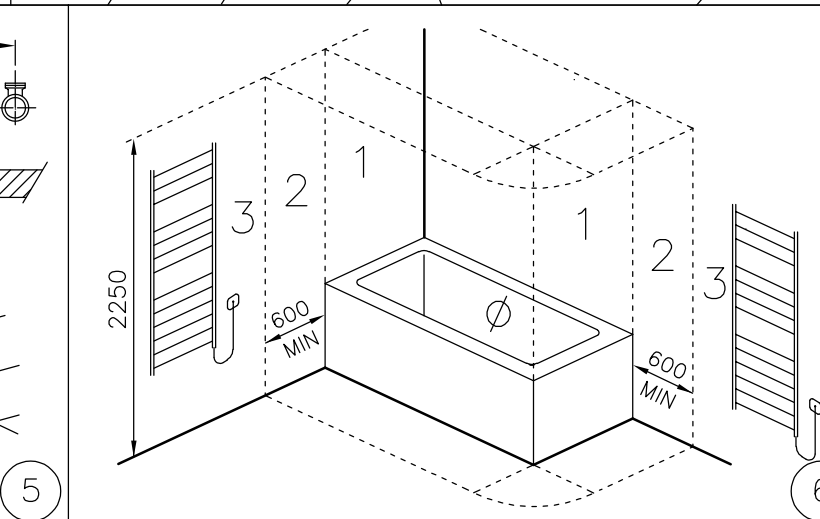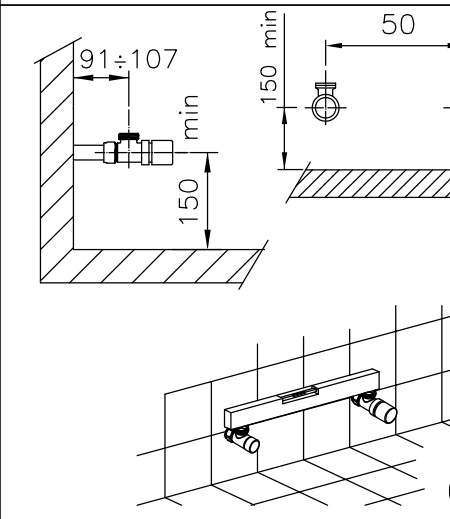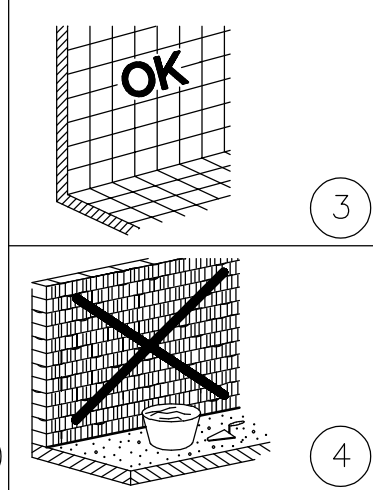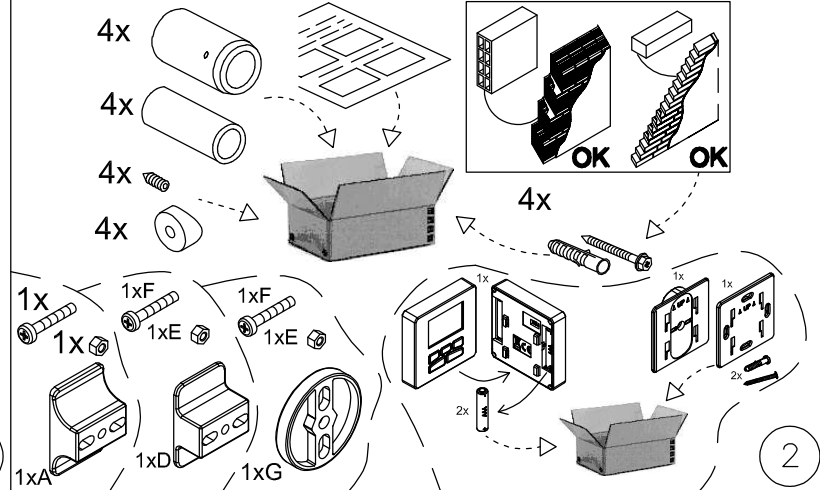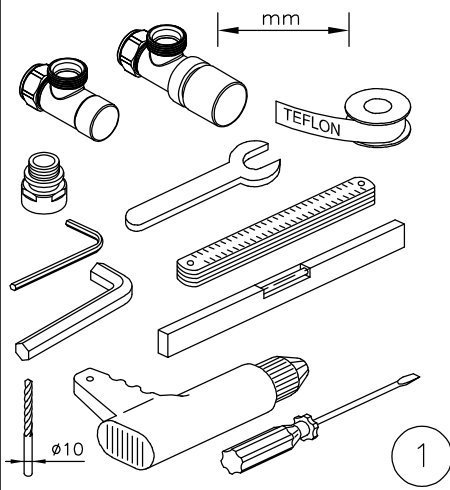

(\*):  
 ESEMPIO CON RADIATORE SOUL\_S  
 EXEMPLE AVEC RADIATEUR SOUL\_S  
 EJEMPLO CON RADIADOR SOUL\_S  
 EXAMPLE WITH SOUL RADIATOR\_S  
 BEISPIEL MIT HEIZKÖRPER SOUL\_S  
 EXEMPLU CU CALORIFERUL SOUL\_S


### SOUL\_S

H	Y	X
1176±2	644	
1540±2	1008	266
1848±2	1316	

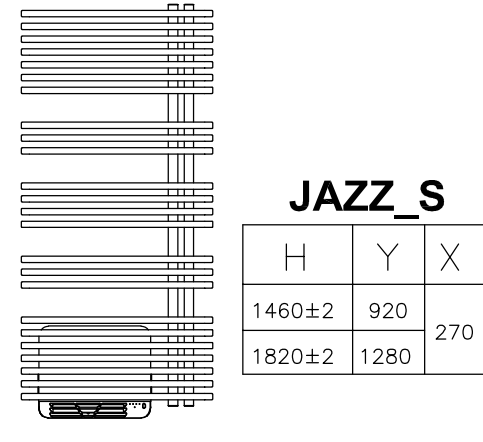

### JAZZ\_S

H	Y	X
1460±2	920	270
1820±2	1280	

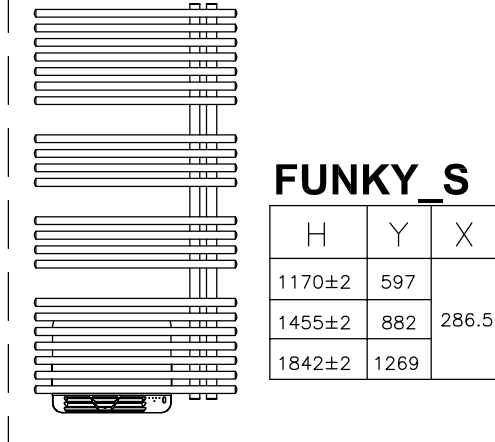

### FUNKY\_S

H	Y	X
1170±2	597	
1455±2	882	286.5
1842±2	1269	

